


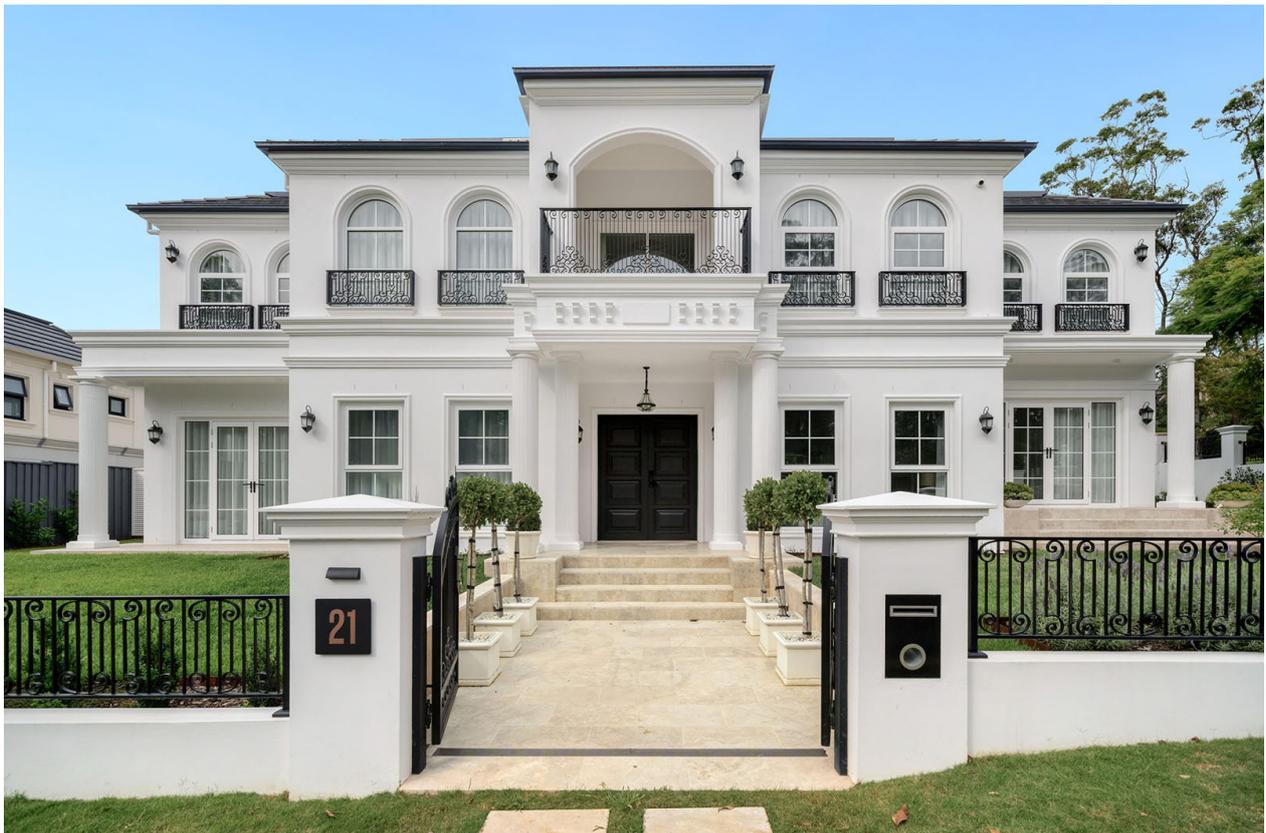

renderlook.

ARCHITECTURAL MOULDINGS



Installation Manual

Architectural Mouldings

15-Year Product Warranty | Backed by Dulux

Overview

This manual provides complete installation guidance for Renderlook Architectural Mouldings. Following these instructions carefully will ensure a professional finish, long-term durability, and eligibility for the Renderlook 15-Year Product Warranty.

★ 15-Year Product Warranty

Renderlook offers a **15-year product warranty** when mouldings are installed and finished using the approved Dulux paint system (ATEX ACRAPRIME TXT primer + ATEX ACRAKIN PTB topcoat). See Section 4 for full specifications.

Clients can **reference Renderlook when ordering Dulux products** to receive a trade discount.

1. When to Install

For Jobs That Will Be Colour Texture Coated:

Install your mouldings **after the first layer of render (the base coat)** but **before the final textured/colour layer of render (the top coat)**.

For Jobs That Will Be Rendered and Painted:

Install your mouldings **after the render is finished** but **before paint works commence**.

2. Preparing the Wall

Proper surface preparation is essential for a strong, lasting bond.

1. **Ensure the wall is straight, dry and clean.** Any dust, grease, loose paint or moisture will reduce adhesion.
 2. **Mark out moulding positions** clearly before you begin. Take into consideration where pre-existing expansion joints are located, and use these as a guide for the expansion joints needed to install the mouldings.
-

3. Installing the Mouldings

Approved Adhesive Options

Only use adhesives **approved by and sold through Renderlook**. Using unapproved products may compromise performance and void your warranty.

- **Option 1:** Polystyrene-suitable construction adhesive — such as Bostik No Nails 310ml Tube
- **Option 2:** Expanding foam adhesive (quick drying)

Important: Expanding Foam Adhesive

Expanding foam sets very fast and is difficult to reposition. Once the moulding is placed it is very hard to remove. This option is **only recommended for experienced installers**.

Silicone Must NOT Be Used as an Adhesive

Do not use silicone as a bonding agent for mouldings. Silicone is **only approved for sealing** at junctions between the moulding and wall surface. Using silicone as an adhesive will result in product failure and may void your warranty.

Installation Steps

3. **Apply adhesive** to the back of the moulding using your chosen Renderlook-approved adhesive.
 4. **Press the moulding firmly** into position and hold until set.
 5. **Expansion joints** are required **every 4.8 metres (every 2 moulds)**. Align with existing structural expansion joints where possible.
 6. **Patch all joints** using Renderlook's in-house patch kit to achieve a smooth, seamless finish.
 7. **Seal all junctions** between the wall and moulding (and along the top if required) with **Sika 11 FC** to create a flexible, weather-tight joint. Note: Sika 11 FC is for sealing only — not for bonding.
-

4. Aftercare & Painting

Post-Render Check

Once the top textured coat of render is applied and dry, inspect all joins and touch up sealant or patching as needed before commencing paint works.

Approved Paint Specification — 15-Year Warranty

To qualify for the Renderlook **15-Year Product Warranty**, mouldings must be primed and painted within **7 days of installation** using the following approved Dulux products:

Product	Product Code	Description
Dulux Primer	19486068-15L	ATEX ACRAPRIME TXT
Dulux Topcoat	19485675-15L	ATEX ACRASKIN PTB

Renderlook Trade Discount on Dulux Products

When ordering the above Dulux products, **reference Renderlook** to receive a trade discount. **Use customer number – 23495.**

Provide job address for Dulux to record Warranty.

Contact your local Dulux trade representative or speak to your Renderlook representative for assistance.

Why Dulux ATEX ACRASKIN PTB?

- **Maximum flexibility:** Designed to expand and contract with the substrate, preventing cracking.
- **Weather resistance:** High-performance exterior coating engineered for Australian conditions.
- **Long-term performance:** Lasting protection for the moulding and underlying substrate.

Painting Steps

8. **Prime first:** Apply **ATEX ACRAPRIME TXT (19486068-15L)** to all moulding surfaces.
 9. **Topcoat:** Once primer is fully dry, apply **ATEX ACRASKIN PTB (19485675-15L)** as the finish coat.
 10. **Inspect periodically** and repaint when needed to maintain appearance and ongoing weather protection.
-

i Warranty Reminder

The 15-year product warranty is valid only when the full Dulux paint system (ATEX ACRAPRIME TXT primer + ATEX ACRAKIN PTB topcoat) is applied within 7 days of installation. Use of non-approved paints or primers will void the warranty.

5. Quick Reference Summary

Step	Requirement
Timing	Install after base coat render; before top coat or paint.
Wall Prep	Wall must be straight, dry, and clean. Mark positions before starting.
Adhesive	Use ONLY Renderlook-approved polystyrene-safe adhesive or expanding foam. No silicone for bonding.
Expansion Joints	Required every 4.8m (every 2 moulds). Align with existing structural joints.
Joins & Sealing	Patch joins with Renderlook patch kit. Seal junctions with Sika 11 FC (sealing only — not for bonding).
Primer	Dulux ATEX ACRAPRIME TXT — Code: 19486068-15L
Topcoat	Dulux ATEX ACRAKIN PTB — Code: 19485675-15L
Paint Timing	Prime and paint within 7 days of installation.
Warranty	15 years when full Dulux system used as specified.
Dulux Discount	Reference Renderlook when ordering to receive trade discount.



For further assistance, visit renderlook.com.au or contact your Renderlook representative.
